

FOB Operating - User Guide



- (1) When the keg is empty disconnect the keg coupler and connect it to a full keg.
 - (2) Push *Vent Mechanism* down on top of FOB until *Sight Glass* is full of beer and no bubbles appear in the *Sight Glass* or in the *Jumper Lines*.
 - (3) Rotate *Float Lifter* on the FOB base into **RED** (By Pass) area to lift the float and then rotate back into the **GREEN** area.
- * Taking these steps **Out Of Order** will result in **Foamy Beer!**

Procedure For Beer Line Cleaning

During periodic cleaning of beer lines rotate *Float Lifter* into the **RED** area for By Pass. Hold the *Vent Mechanism* down to allow the cleaning solution to flow through the *Vent Mechanism* and the *Drain Line*. Upon completion of line cleaning assure FOB has been filled with fresh beer with no bubbles appearing in the *Sight Glass* or *Jumper lines*. Rotate *Float Lifter* on FOB to **GREEN** to allow beer dispense. Clean exterior with warm water and damp cloth.